

INSTALLING MEZZO GRADIENTS

2. the design overrules the arrow on the back 3. apply 180° U-turn if necessary 1. follow your design

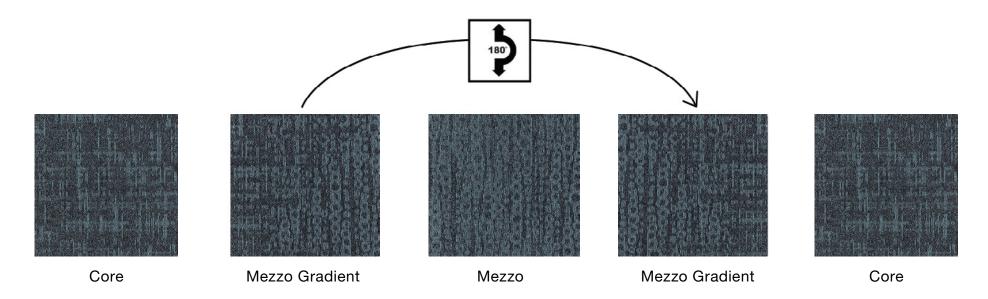

Not OK. The arrow on the back was followed.

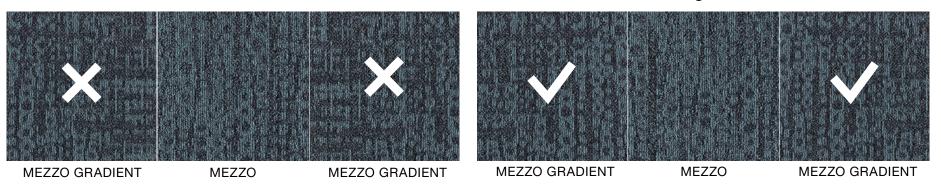

OK. Floor design was followed.

MEZZO GRADIENTS - EXAMPLE TRANSITION 3 DESIGNS

BRICK INSTALLATION SHOWING TRANSITION FROM MEZZO (M) TO MEZZO GRADIENT (MG) TO CORE (C)

